


MAX Chronograph

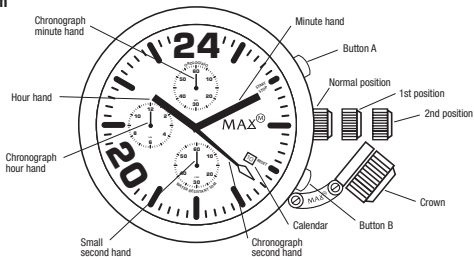

To change the date and time you need firstly to turn the crown anti-clockwise to unloosen. You then have the possibility to pull out the pin to the first position, this is to change the date. If you pull the pin out to the second position you can change the time. When pushed totally back in, the watch will function again. You can then turn the crown back clockwise to lock function.

Working stopwatch

When you press button A the stopwatch begins. If you then press button A again then the stopwatch stops. By pressing button A once more the stopwatch will again continue from the last place.

To reset back to zero press button B, all hands then spring back to the startpoint.