


## MAX Analogue

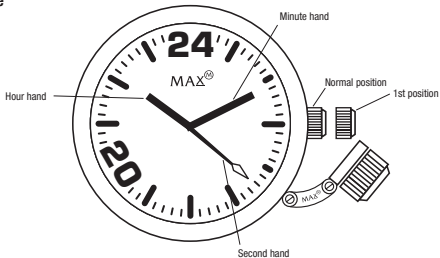

To change the time you need firstly to turn the crown anti-clockwise to unloosen. You then have the possibility to pull out the pin to the first position, this is to change the time. When pushed totally back in, the watch will function again. You can then turn the crown back clockwise to lock function.